

MECHANICAL JACKS


SPREADER JACK



Model 3A

The model 3A Spreader Jack is used when working in close quarters.

The Spreader Jack has a closed height of only 3", with 1" stroke for adjustments, yet it **can support 3 tons**. The serrated cap rotates to prevent twist out, but does not pivot. The Spreader Jack may also be used as a planer jack.

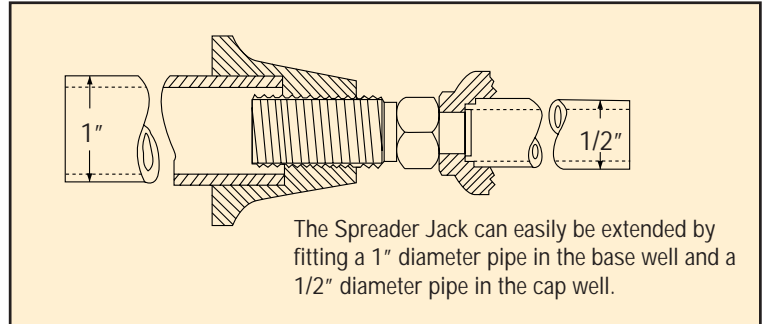

PLANER JACKS



Four different models are available, with capacities ranging from 2 to 8 tons. They are used in leveling work on plane beds, millers and other machinery.

Screw's operation provides infinite height adjustments for exact leveling. The side-locking screw keeps the jack extended and **prevents lowering due to vibration**. The ball and socket cap swivels to center load forces. The notched base fastens easily to machine beds.

Model Number	Sustaining Cap. (tons)	Minimum Height (in)	Operable Rise (in)	"A" Across Flats (in)	Weight (lbs)
1P	2	2 3/4	1	2 3/8	1 1/2
2P	4	3 3/4	1 1/2	3 1/8	3
3P	6	5 1/4	2 1/4	4	6
4P	8	7 1/2	4	5 3/8	12